


## **Water Valve Installation Instructions**

### **TO REMOVE OLD VALVE**

1. Turn off water supply.
2. Remove pedal and pedestal covers (if applicable to toilet model).
3. Remove supply line and outlet hose from water valve.
4. Unscrew both hex screws from sides of water valve.

### **TO INSTALL NEW VALVE**

1. Lubricate plastic mushroom cap with petroleum jelly or silicone grease.
2. The new valve has a 1/2-inch MPT inlet. An adapter (purchased separately) will be required to connect a flared-end water supply line (see adapter chart below).
3. Cut off flared end of incoming water supply line with tubing cutter or hacksaw. Remove the flare nut.
4. Square the end of the water supply line and de-burr the outside and inside edges.
5. Install adapter to water supply line ("grabber"-type shown). Make certain adapter is attached securely.
6. Install new water valve to toilet base with two hex screws.
7. Attach water supply line to water valve. Tighten 1/4 to 1/2 turn beyond hand-tight.
8. Attach outlet hose to water valve, securing it with hose clamp. Make sure hose clamp does not interfere with operation of flush lever or water valve.
9. Reinstall pedestal and pedal covers.

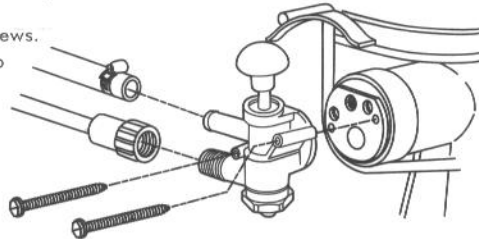

Size/Type of Inlet Water Line	SeaLand Adapters	Quest <sup>®</sup> Adapters	Fast & Tite <sup>®</sup> Adapters	
			Polyprop	Nylon
3/8"OD rigid copper, plastic	230362	QBFNCR1	P6FC8	N6FC8
1/2"OD rigid copper, plastic	230640	QBFNCR2	P8FC8	N8FC8
5/8"OD rigid copper, plastic	230666	-	P10FC8	N10FC8
1/2"ID flexible hose	230193	-	-	-
5/8"ID flexible hose	230192	-	-	-

SEACOAST SERVICES, Inc.  
877-645-2064  
www.seacoastservices.com

