


## Vacuum Breaker Kit Installation Instructions

1. Turn off water supply.
2. Press flush pedal and drain water from toilet bowl.
3. Remove pedestal cover (if applicable to toilet model).
4. Loosen stainless steel band and remove plastic half clamps that hold china bowl and plastic base together.
5. Tilt china bowl forward. For toilet models 110, 111, 147, 148, 706 and 711-M28, remove plastic vacuum breaker cover.
6. Grasp vacuum breaker attached to back of toilet, and pull it out of toilet. Set toilet bowl aside.
7. Remove water hose from old vacuum breaker and install on new vacuum breaker.
8. On back of toilet bowl, pull old rubber expansion gasket out of bowl. Insert new rubber expansion gasket into back of bowl using soapy water.
9. For toilet models 147, 148 and 706, remove Disc from top of new vacuum breaker.
10. Insert new vacuum breaker into expansion gasket as far as possible. Reinstall vacuum breaker cover (if applicable).
11. Place china bowl back on plastic base in original position.
12. Center china bowl outlet hole over plastic flush ball seal.
13. Position plastic half clamps under stainless steel band clamp so that tabs interlock together at front of toilet base (gap in rear).
14. Tighten band clamp to 65 in.-lbs. of torque.
15. Reinstall pedestal cover (if applicable).
16. Turn on water supply.

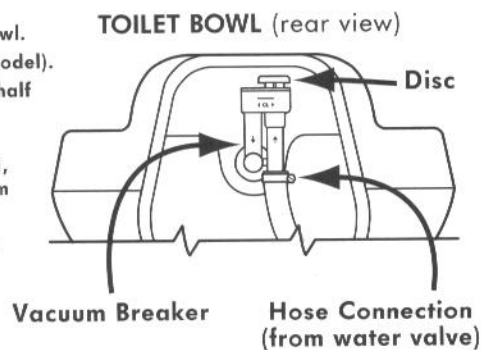

SEACOAST SERVICES, Inc.  
877-645-2064  
[www.seacoastservices.com](http://www.seacoastservices.com)

